



User Manual

Keylock 6600/6600A

BASIC INFORMATION

The original master password is "11111111".

Important:

Please modify the master password during first time use.

- All User ID : 3 digit numbers
- All Passwords : 8 digit numbers
- User Capacity : Fingerprint: 75, Password: 78 (Keylock 6600)
Fingerprint: 150, Password: 78 (Keylock 6600A)

To unlock, slide up the front cover. The default unlocking mode is fingerprint. Other mode available is ID/Password.

Indication beep:

- Long beep - Success
- Short beep - Press button
- Short & repeating beep - Low battery alert
- Musical tone - Unlocking alert

ENGLISH



CAUTION

Reset button can be used to erase all unlocking passwords and fingerprints and it will reset the lock to its original factory mode.

OPERATION

1 MODIFICATION OF ID / PASSWORD

To change master password

- 1 Press 0
- 2 Press *
- 3 Enter Original Master Password
- 4 Enter New Password
- 5 Enter New Password
- 6 Press #

To change user password

- 1 Press 0
- 2 Press *
- 3 Enter Old Password
- 4 Enter New Password
- 5 Enter New Password
- 6 Press #

2 ENROLLMENT OF PIN / PASSWORD USER

- | | |
|--------------------------|-----------------------|
| 1 Press 1 | 5 Enter User Password |
| 2 Press * | 6 Enter User Password |
| 3 Enter Master Password | 7 Press # |
| 4 Enter 3 digits user ID | |

For example:
To enroll a user with ID NO. 123 and password 12312312, please:

- 1 Press 1
- 2 Press *
- 3 Enter Master Password
- 4 123
- 5 12312312
- 6 12312312
- 7 Press #

3 ENROLLMENT OF FINGERPRINT USER

User enrollment by ID number

- 1 Press 1
- 2 Press #
- 3 Enter Master Password
- 4 Enter User ID
- 5 Press #
- 6 Place Fingerprint

User enrollment not determined by user ID

- 1 Press 1
- 2 Press #
- 3 Enter Master password
- 4 Press #
- 5 Desired fingerprint

To add another user

You can add a user when you hear a long beep after every enrollment. Repeat from

- 1 Enter User ID
- 2 Press #
- 3 Place Fingerprint

To add another random user

After long beep indicating successful enrollment, just place another fingerprint.

For example, to enroll one user after another.

- 1 Press 1
- 2 Press #
- 3 Enter Master Password
- 4 Press #
- 5 Place Fingerprint
- 6 Long beep indicating successful enrollment
- 7 Another user ID for new user
- 9 Press #
- 8 Place Fingerprint
- 10 Long beep indicating successful enrollment
- 11 Repeat

4 DELETION OF PIN / PASSWORD USER

Deletion by user ID

- 1 Press 2
- 2 Press *
- 3 Enter Master Password
- 4 Enter User ID
- 5 Enter User ID
- 6 Press #

Deletion of all users

- 1 Press 3
- 2 Press *
- 3 Enter Master Password
- 4 Press #

5 DELETION OF FINGERPRINT USER

Deletion of fingerprint user by user ID

- 1 Press 2
- 2 Press #
- 3 Enter Master Password
- 4 Enter User ID
- 5 Enter User ID
- 6 Press #

Deletion of all fingerprint user

- 1 Press 3
- 2 Press #
- 3 Enter Master Password
- 4 Press #

6 ENABLE / DISABLE VISITOR MODE

- 1 Press *
- 2 Press *
- 3 Enter Master Password
- 4 Press #

NOTE:

By setting the visitor mode, the door will be unlocked when the front cover is lifted up. Users don't need to verify fingerprint or password.

7 UNLOCKING OPERATION

Password

Press 8 digit password to verify the User ID.

Fingerprint

Place the enroll fingerprint on the sensor window. Wait for the successful indication beep.